

**ATTENTION**

Read carefully these instructions before installing and using this device and keep them for future reference. Attention to installation and electrical wiring. Use this device only as described in this document and never use itself as a security device. The device must be disposed of in accordance with local standards for the collection of electrical and electronic equipment.



**DESCRIPTION**

RH2 has a sensor which reads the humidity (0-100% RH) and the temperature (-40-125°C) of a room. One relay 16A controls the humidity of the room and the other one 10A controls either the humidity or the temperature of the room. Both relays can operate to cooling (dehumidification) or heating (humidity) mode via a parameter adjustment. Through the serial input it can connect to the CAMIN modbus network for full control and monitoring of the device.

**PROGRAMMING THE PARAMETERS**

By pressing **←** we **enter or exit** the parameter's menu.  
 The first parameter **SPo** is displayed and with the **▲**, **▼** we scroll into the parameters based on the parameter's table below.  
 By pressing **SET** the value of the parameter is displayed and with the **▲**, **▼** we adjust the value.  
 By pressing **←** or **SET** we **confirm** the new value and the name of the parameter is displayed.

**TEMPERATURE INDICATION**

By pressing **▲** the room temperature is displayed.

**TECHNICAL SPECIFICATIONS**

Power supply: 230VAC 50/60Hz / Maximum power consumption: 3W  
 It is recommended using a power supply safety fuse 0.5A (not included)  
 Humidity and temperature sensor from 0-100%RH and from -40-125°C with metal tube Ø8mm and length 14cm  
 Humidity accuracy from 0-90%RH ±2%RH, from 90-95%RH ±2%RH and from 95-100%RH ±3.5%RH  
 Temperature accuracy from -40-90°C ±0.3°C and from 90°C-125°C can reach till ±0.5°C  
 Serial input  
 Relay 1 **🔌** 250VAC 16A / relay 2 **AUX** 250VAC 10A  
 Operating temperature: -15÷+55°C / Storage temperature: -20÷+80°C  
 The device is mounted through panel hole 29x71mm and is restrained with two plastic side brackets  
 Connection with terminal blocks 18A

Indications	
<b>🔌</b>	relay 1 ON
<b>AUX</b>	relay 2 ON
<b>%RH</b>	humidity indication
<b>°C</b>	temperature indication
<b>⚠️</b>	alarm ON
<b>🔧</b>	malfuction ON


**SERIAL INPUT**

RH2 can connect to the key programmer or to the data logger **Mini Logger** or to the **KIOUR CAMIN** network or to any modbus network.





- Key programmer:** controller's parameter values can be saved or retrieved from the programming key. Plug in the programming key to the controller and press at the same time **SET+▲**. The device connects to the key and the message **Eo** is displayed. By pressing **▲** the device downloads the parameters from the key and the message **ro** = read O.K. or **rF** = read Fail is displayed. By pressing **▼** the device uploads the parameters to the key and the message **Yo** = Write O.K. or **YF** = Write Fail is displayed. In case of failure (**rF** or **YF**) reenter the key to the serial input and repeat the procedure from the beginning. The key can connect to all **KIOUR** devices. If you try to read the parameters of a different device, message **rF** is displayed. At any time, we can perform the aforesaid operation. After 10sec the key is disconnected.
- Data logger Mini Logger:** the controller is connected to the data logger via cable and by programming the parameter Add = 1. Automatically, based on selected minutes, the data logger writes to a microSD memory card the controller's temperatures, status and alarms.
- CAMIN network:** the controller can connect to the CAMIN network via an interface NET-INS-485. CAMIN is an PC software application designed to collect information, watch and fully control a net of KIOUR devices while sending SMS and email in case of an alarm. The maximum length of the net can be 1000 meters.

**CONNECTIONS - DIMENSIONS**

**SENSOR CONNECTIONS MODEL SHT**

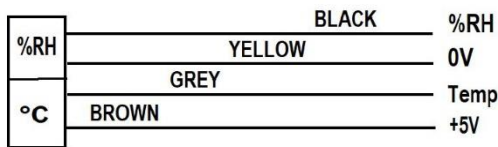

**CONTROLLER CONNECTIONS**

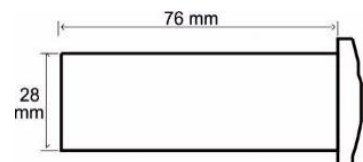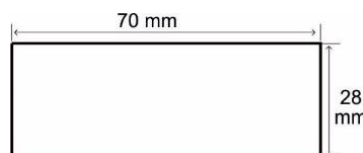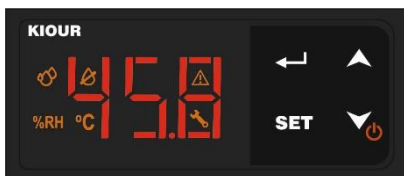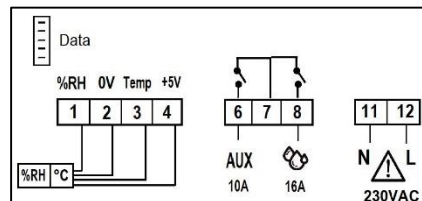

## PARAMETER TABLE

No		description	min	max	RH2	UOM
1	SP1	SET POINT1: humidity control of relay 1	1	99.9	20.0	%RH
2	SP2	SET POINT2: humidity control of relay 2 <b>AUX</b>	-40	120	40.0	°C
3	Cod	code to enter parameter's menu Cod = 22 resetting to factory settings RH2 adjust Cod = 31 and exit from the parameters menu	0	255	0	-
4	di1	differential relay 1 function	0.1	25.5	5.0	%RH
5	di2	differential relay 2 <b>AUX</b>	0.1	25.5	5.0	°C
6	dEC	temperature indication as integer or decimal, where 0= integer, 1= decimal	0	1	1=decimal	-
7	U1	not in use	-	-	-	-
8	U2	not in use	-	-	-	-
9	ALo	low humidity alarm setting	0.1	AHi	10.0	%RH
10	AHi	high humidity alarm setting	ALo	99.9	80.0	%RH
11	HC1	relay 1 operation, where 0=dehumidification, 1=humidity	0	1	1=humidity	-
12	HC2	relay 2 <b>AUX</b> operation, where 0=cooling (dehumidification), 1=heating (humidity)	0	1	0=cooling	-
13	Add	address of device on network mode	0	255	1	-
14	dAL	time delay in activating alarms "AHi" and "ALo"	0	255	0	min
15	tOF	minimum time OFF of relay 1 and relay 2	0	4	0	min
16	trE	response time of the device on the network	30	100	30	msec
17	AJH	humidity indication offset	-9.9	15.5	0.0	%RH
18	AJc	temperature indication offset	-9.9	15.5	0.0	°C
19	roC	relay 2 <b>AUX</b> option to work based on measurement of humidity (roC = 0) or based on temperature (roC = 1)	0	1	1=temperature	-

## ALARM TABLE

1	LF1	humidity sensor malfunction (temperature sensor malfunction is not available)
2	ALo	Low humidity alarm
3	AHi	High humidity alarm

**The alarms are automatically deactivated when the cause of the alarm disappears.**

Made in Greece.



RoHS



**ATTENTION** according to safety standards, the device must be properly positioned and protected from any contact with electrical parts. All parts that provide protection must be fastened in such a way that they cannot be removed without the use of tools. **ATTENTION:** disconnect the power supply of the device before proceeding to any kind of maintenance. **ATTENTION:** do not place the device near heat sources, equipment containing strong magnets, in areas affected by direct sunlight or rain. **ATTENTION:** prevent electrostatic discharges at the side slots of the device and sharp objects from being inserted. **ATTENTION:** separate the signal's cables from the power supply's cables to prevent electromagnetic disorders. Signal cables must never be in the same pipe with the power supply cables. **Use the device only as described in this document, not to use itself as a security device. The device must be disposed of in accordance with local standards for the collection of electrical and electronic equipment. Read and keep these instructions.** The device is under two year's guarantee of good operation. The guarantee is valid only if the manual instructions have been applied. The control and service of the device must be done by an authorized technician. The guarantee covers only the replacement or the service of the device.

**KIOUR** preserves the right to adjust its products without further notice.