

**ATTENTION**

Read carefully these instructions before installing and using this device and keep them for future reference. Attention to installation and electrical wiring. Use this device only as described in this document and never use itself as a security device. The device must be disposed of in accordance with local standards for the collection of electrical and electronic equipment.



**DESCRIPTION**

**VD2F / VD2FX** is a thermostat for cooling cabinets -with defrost control- and heating cabinets (bain-marie); Model **VD2FX** is suitable for all applications including the ones with anti-explosive standards; Room temperature is controlled with NTC or PTC sensor; NTC temperature range is  $-50\pm+110^{\circ}\text{C}$  and PTC temperature range is  $-50\pm+150^{\circ}\text{C}$ ; Possibility to select a 2nd sensor - through a parameter - to control the evaporator. It has: 3 indication digits with resolution  $0.5^{\circ}\text{C}$  and 4 buttons; one digital input for controlling the cabinet's door; 2 relays: a main relay 30A 250VAC that is configured via parameter in operation: cooling or heating mode; The 2<sup>nd</sup> relay is auxiliary, 10A 250VAC (defrost, fan, lamp, alarm). It, also, has a buzzer in case of an alarm; The device is mounted on a panel hole 29x71mm and it is restrained with plastic side brackets. Through the serial input it can be connected to a network either through Cloud IoT on the CORTEX platform, or through a computer in the CAMIN program for complete local recording and monitoring of the device.

**INDICATIONS AND BUTTONS FUNCTION**



Display indications	
	relay ON in cooling mode
	relay ON in heating mode
	auxiliary relay ON
	defrost ON
	ECO mode
	alarm ON
	malfuction ON

Keyboard	
	enter/exit the parameter's menu
	display the parameter's value enter parameter's value manual defrost
	up arrow. Lamp ON-OFF. display evaporator temperature T2
	down arrow mute buzzer ON ECO 2 sec. ON/OFF device 7sec.

For more indications regarding the alarms please see the alarm's table at page 4.

**ADJUSTING TEMPERATURE – SET POINT**

1. Press to display the first parameter **SPo**. In case of **Err** failure, press and hold the button.
2. Press to display its value. With or change **SPo** value.
3. Press to save the new value. The device is working with the new adjustment.

**INDUSTRIAL FACTORY SETTINGS**

1. Press to display **SPo**. Press once and the parameter **Cod** is displayed.
2. Press to display its value and press to enter the value **31**. Press to store the value to parameter **Cod**.
3. Press again to exit the parameter menu, 'YES' is displayed on the screen. All appropriate factory settings are now stored in the device.

**ON/OFF DEVICE**

To activate or deactivate the device, press for 7 seconds .

**MANUAL DEFROST**

Press for 3 seconds to start a manual defrost with duration based on the parameter **dd2**.

**PROGRAMMING A PARAMETER**

**ATTENTION:** to gain full access to the parameter's menu, the 2<sup>nd</sup> parameter **Cod** must be adjusted to **22** (see parameter table page 2).

1. Press to enter the parameter menu.
2. Choose the parameter you want to adjust by pressing or and press to display its value.
3. Press or to change its value and then press to store the new value.
4. Press to exit the parameter menu.

**TECHNICAL SPECIFICATIONS**

Models **VD2F / VD2FX** power supply: 230VAC 50/60Hz / Maximum power consumption: 3W. Model **VD2FW / VD2FXW** switching power supply 100-264VAC 50/60Hz 5W. It is recommended using a power supply safety fuse: 0.5A (not included)

Room and evaporator temperature sensors NTC 10K 1% 25°C IP68 and temperature range  $-50\pm+110^{\circ}\text{C}$  ( $-58\pm+230^{\circ}\text{F}$ ) or PTC 1K 25°C and temperature range  $-50\pm+150^{\circ}\text{C}$  ( $-58\pm+302^{\circ}\text{F}$ ) - not included - / Accuracy:  $\pm 0.5^{\circ}\text{C}$

Alarm buzzer / Serial input with 5pin connector / Digital input door

1<sup>st</sup> Relay cool/heating 30A res. 250VAC normally open contact / 2<sup>nd</sup> Relay auxiliary 10A res. 250VAC normally open contact / Max current load on terminal blocks 18A

Connections: cable cross section 2.5 mm<sup>2</sup> for all relays / cable cross section from 0.25 to 1.0 mm<sup>2</sup> for the sensors and door switch

Connections with terminal blocks 18A using cable with cable cross section up to 2.5 mm<sup>2</sup> / It is recommended using a torque wrench with maximum torque 0.4Nm

Operating temperature:  $-15\pm+55^{\circ}\text{C}$  / Storage temperature:  $-20\pm+80^{\circ}\text{C}$

Dimensions 37x79x81mm / The device is mounted on panel hole 29x71mm and restrained with plastic side brackets / Protection IP65 front

Firmware: V4.1.1

## SERIAL INPUT

VD2F / VD2FX connects via serial input to the following options:

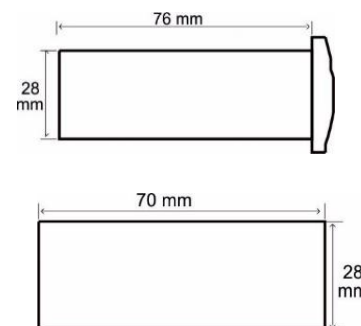
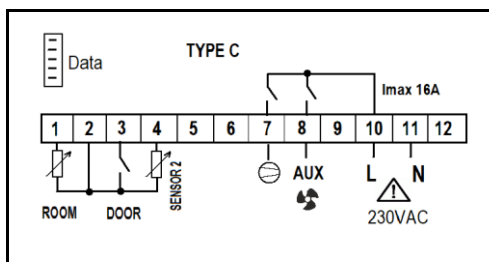
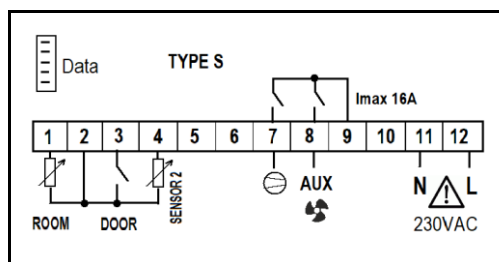
- Cloud IoT CORTEX platform: connection to the cloud and the CORTEX platform for monitoring - recording and managing the thermostat from your mobile, tablet or any computer, notifications via email and Viber SMS in case of alarm.
- CAMIN program: local connection and monitoring - recording and management of the thermostat through the CAMIN program installed on a local computer.
- Mini Logger recorder: the thermostat can be connected to the recorder and record based on selected minutes on a microSD memory card, its temperatures and the state of the relays and alarms. It is connected via a cable to the serial input and we program the parameter Add = 1.
- Memory key: controller's parameter values can be saved or retrieved from the programming key. Plug in the programming key to the controller and press at the same time [SET]+[▲]. The device connects to the key and the message "Eo" is displayed. By pressing [▲] the device downloads the parameters from the key and the message "ro" = read O.K. or "rF" = read Fail is displayed. By pressing [▼] the device uploads the parameters to the key and the message "Yo" = Write O.K. or "YF" = Write Fail is displayed. In case of failure (rF or YF) reenter the key to the serial input and repeat the procedure from the beginning. The key can connect to all **KIOUR** devices. If you try to read the parameters of a different device, message "rF" is displayed. At any time, we can perform the aforesaid operation. After 10sec the key is disconnected automatically.

## ELECTRICAL DIAGRAM - DIMENSIONS

**ATTENTION:** according to safety standards, the device must be properly positioned and protected from any contact with electrical parts. The device must be fastened in such a way that it cannot be removed without the use of tools. Disconnect the main safety switch of the installation before proceeding to any maintenance. Disconnect the power supply of the device before proceeding to any maintenance. Do not place the device near heat sources, equipment containing strong magnets, in areas affected by direct sunlight or rain. Prevent electrostatic discharges and sharp objects from been inserted to the device. Separate signal cables from power supply cables to prevent electromagnetic disorders. Signal cables must never be in the same pipe with the power supply cables. **ATTENTION:** Read carefully the technical specifications and make sure that the working conditions are appropriate. According to safety standards, the device must be fastened in such a way that it cannot be removed without the use of tools.




Dimensions are in mm. The device is mounted on panel hole with cut 29x71mm and restrained with plastic side brackets.

**Type S** means that the relay's common is free. **Type C** means that the relay's common is connected to 230 VAC



## PARAMETER'S TABLE

No		Description	min	max	Default	UOM
1	SPo	SET POINT: room temperature setting	LSP	HSP	2.0	°C/°F
2	Cod	Enter password Cod = 22 and press  to access all parameters menu	0	255	0	units
<b>ANALOG INPUTS - TEMPERATURE</b>						
3	diF	Differential of room temperature SPo (thermostat delay)	0.1	25.5	3.0	°C/°F
4	LSP	Lower setting limit of SPo	-50.0	+150	-2.0	°C/°F
5	HSP	Maximum setting limit of SPo	-50.0	+150	8.0	°C/°F
6	dEC	Temperature indication as integer or decimal, where 0 = integer , 1 = decimal	0	1	1=decimal	units
7	SEn	Sensor type NTC/PTC 0 = PTC / 1 = NTC	0	1	1=NTC	-
8	SE1	Room sensor offset	-9.9	+15.5	0.0	°C/°F
9	SE2	Evaporator sensor offset	-9.9	+15.5	0.0	°C/°F
10	tdS	Delay in displaying the actual room temperature on the screen when the door opens	0	255	0	min
11	oS2	Evaporator's sensor operation 0 = Sensor OFF and by pressing  it is displayed " - - - " (dashes) 1 = Sensor ON and by pressing  it is displayed evaporator's temperature T2. 2 = Evaporator's sensor is activated and its temperature is displayed on the screen, and by pressing  room temperature is displayed. Does not affect the operation of the device.	0	2	0	units
12	C_F	Temperature measurement unit: toggling between °C/°F do not adjust the SPo automatically, it must be changed by the user: 0 = °C / 1 = °F	0	1	0=°C	°C/°F
<b>ALARMS</b>						
13	ALo	Low room temperature	-50.0	+150	-4.0	°C/°F
14	AHi	High room temperature	-50.0	+110	+15.0	°C/°F
15	At2	Time delay in activating "AHi", "ALo" and the buzzer among them. This setting does not apply to sensor failure and door alarm. -1 = OFF buzzer 0 = ON buzzer in case of an alarm 1 to 120 min = delay in buzzer activation in case of an alarm	-01	120	0	min
<b>DIGITAL INPUT - DOOR SWITCH</b>						
16	dLd	Door switch operation 0 = OFF door switch and Virtual door switch 1 = NC (normally close) 2 = NO (normally open) 3 = Virtual door switch. Detects the change in room temperature. The operation of the virtual switch: controls the Eco, controls the lamp (OAU = 3), does not activate door's ALARM and does not stop the compressor.	0	3	1= NC	units

		The duration of defrost <b>dd2</b> continues and counts normally. If the 1st relay (30A) is in heating operation, then the door control is deactivated.				
17	<b>tdo</b>	Door ALARM delay time of the real switch. (compressor is deactivated - OFF - when there is door ALARM)	1	250	120	sec
18	<b>Vdt</b>	Retention time of the Virtual switch open door signal	10	250	10	sec
19	<b>VdS</b>	Virtual switch door opening detection sensitivity. The units increases, the sensitivity increases.	2	30	20	units
<b>ECO MODE</b>						
20	<b>Edi</b>	Differential of ECO mode	0.5	25.0	3.0	°C/°F
21	<b>EtF</b>	Duration timer of the ECO mode	1	24	1	hours
22	<b>Edo</b>	In economy mode, how many times must the door be opened (1,2, etc. times) to stop the economy mode and return to the original set point.	1	10	1	units
23	<b>ECt</b>	Value =0 → ECO mode is deactivated Value from 1-240 → is the time that if elapses without door's opening then the SET POINT of economy mode ( <b>Eco</b> ) is activated.	0	240	0	min
24	<b>ECo</b>	SET POINT of economy mode SET POINT of economy mode is activated when the door is closed for a time longer than the value of the <b>ECt</b> parameter. When the thermostat is in <b>Eco</b> mode, then the LED  lights up	-50	30	4.0	°C/°F
<b>DEFROST</b>						
25	<b>dFr</b>	Time between two successive defrost, where if dFr=0 or if the first relay (30A) is in heating mode, the defrost is deactivated	0	100	6	hours
26	<b>dd2</b>	Defrost duration (manual and automatic)	1	120	18	min
27	<b>dE5</b>	Defrost end temperature, room temperature.	0.0	100	10.0	°C/°F
28	<b>dP3</b>	Dripping time, where the compressor is OFF after defrost.	0	15	0	min
29	<b>dY4</b>	Display indication during defrost -2 = SPo + diF value is displayed when room temperature is greater than SPo + diF -1 = "dFr" is displayed when room temperature is greater than SPo + diF 0 = room temperature is displayed 1 to 40 minutes = "dFr" is displayed from 1 to 40 minutes from the initiation of defrost	-2	40	-1	min
<b>COMPRESSOR</b>						
30	<b>CP2</b>	Compressor's minimum time OFF	0	15	3	min
31	<b>CF3</b>	Compressor's operation in case of room's sensor malfunction LF1 -1 = compressor OFF 0 = compressor ON while defrost starts based on timer dFr and ends based on timer dd2 or temperature dE5, whichever comes first. 1 to 150 min = constant compressor operating time. The minimum compressor pause is determined by the <b>CP2</b> parameter. Defrosting starts at dFr time and lasts dd2. time or temperature dE5, whichever comes first. In heating mode and during sensor malfunction, the main relay 30A is deactivated.	-1	15	0	min
<b>RELAYS</b>						
32	<b>rHC</b>	First relay 30A operation mode, where 0 = cooling / 1 = heating	0	1	0=ψύξη	units
33	<b>OAU</b>	Second Auxiliary relay operation 0 = OFF 1 = parallel relay operation to the ON / OFF operation of the thermostat 2 = fan operation based on the door switch, where the door switch must be activated. If the first relay (30A) is in heating mode, the door control is deactivated. 3 = lamp function based on the door switch, where the door switch must be activated. If the first relay (30A) is in heating mode, the door control is deactivated 4 = lamp's ON-OFF by pressing for 1 sec the  button of the device. In <b>Eco</b> mode the lamp is OFF. At the end of <b>Eco</b> mode the lamp lights up. 5 = parallel operation with 1st relay (30A) 6 = Electrical Defrost. (Compressor OFF, auxiliary relay ON) 7 = HOT GAS Defrost. (Compressor ON, auxiliary relay ON) 8 = ON in case of alarm, when the cause of activation of the alarms is gone, then the relay is deactivated. In heating mode, the door control is deactivated	0	8	2	units
<b>NETWORK - GENERAL SETTINGS</b>						
34	<b>tPE</b>	Unique product number – no access -	-	-	231	-
35	<b>Add</b>	Device address on network	0	255	1	units
36	<b>trE</b>	Response time of the device on network	5	100	40	msec
37	<b>bAU</b>	Baud rate: 0 = 2400 / 1 = 4800 / 2 = 9600 / 3 = 19200 Enter the new value, exit the parameter menu by pressing  and toggle the power supply of the device	0	3	3	units
38	<b>Pro</b>	Cabinet's program (factory settings) is displayed – no access	-	-	31	-
39	<b>SrU</b>	Room service: after the end of the selected time, 'SrU' is displayed and informs that the room needs service. The thermostat continues to operate normally and its functions are not suspended. -1 = disabled function 0 to 150 weeks = remaining time to activate the 'SrU' room service notification. The countdown starts once a new value is stored. Whenever we enter the parameter, the remaining time until the activation of 'SrU' notification is displayed. To deactivate the notification, insert SrU = -1.	-1	150	-1	weeks
40	<b>UEr</b>	Firmware version – no access -	-	-	X.X.X	-

**ALARM'S TABLE**

1	LF1	Room sensor malfunction
2	LF2	Evaporator sensor malfunction
3	ALo	Low room temperature
4	AHi	High room temperature
5	dor	Open door alarm (when the cabinet's door opens, the fan stop)
6	SrU	room service notification: timer has elapsed and the cabinet needs a service (see parameter 32, SrU)
7	EEr	Error in memory RAM: re-enter the SPo (see ADJUSTING TEMPERATURE – SET POINT page 1)
<b>The alarms are automatically deactivated once the cause of the alarm disappears.</b>		

**Made in Greece.**

The device is under two year's guarantee. The guarantee is valid only if the manual instructions have been applied. The control and service of the device must be done by an authorized technician. The guarantee covers only the replacement or the service of the device. KIOUR PC implements a Quality Management System according to EN ISO 9001:2015 Standard with registration number 01013192. KIOUR preserves the right to adjust its products without further notice.

